

User Manual

MODULE CHARCOAL GRILL 50



RÖSHULTS



Module Charcoal Grill 50

Design: Broberg & Ridderstråle

 
Art no: 200460 / 200461

Colours: Anthracite / Brushed Stainless Steel

Materials: Stainless Steel

Measurements: L 500 D 500 H 281 mm / L 19.7 D 19.7 H 11 in

Weight: 25 kg / 55 lb

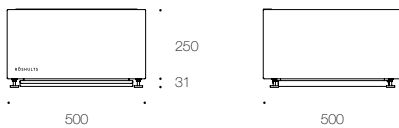

Color & Sample

Frame available in



Anthracite. Akzo Nobel

 
Röshults Sample: C0004



Brushed Stainless Steel. 316L

Röshults Sample: ME003

Parts list

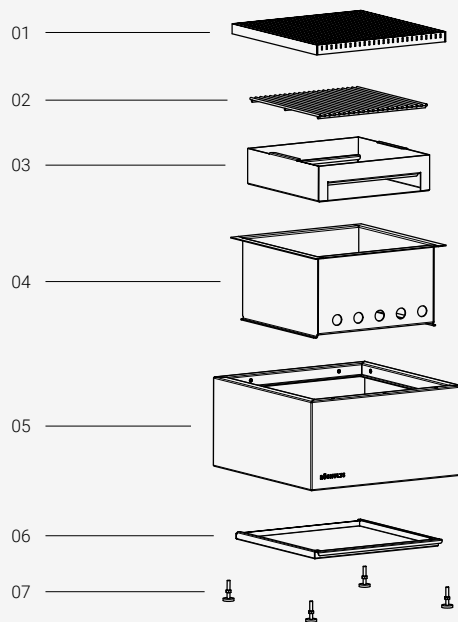

NO	DESCRIPTION
01	Grill grate
02	Charcoal grate
03	Charcoal Holder
04	Inner box
05	BBQ grill frame
06	Drip tray
07	Feet support

Warning

Please save this instruction manual for future reference. This barbecue grill is designed only for outdoor use. Don't allow young children to operate this grill.

⚠ Warning!

For your safety, please note:

- Use outdoors only.
- You should use caution when grilling. The grill will be hot and can cause burn injuries.
- Read the instructions before using the appliance.

⚠ Warning!

- Never use water to control or extinguish the charcoal.
- Never pour any kind of flammable liquid on barbecue charcoal or briquettes already lit.
- The grill gets very hot, never move the grill when in use. Make sure that pressure vessels and combustible liquids such as, gasoline, alcohol, etc. are stored far away from the grill.
- Keep children and pets far away from the grill.
- Oven mitts should always be used when grilling, adding briquettes and handling the cover.
- Never dispose of briquettes where there is a risk of someone stepping on them or a fire hazard.

- Do not remove the ashes until the coals have burned out and cooled completely. Do not put the grill in storage until it is completely cooled off.
- **The grill should never be used as a heating element.**
Do not grill indoors! Only for outdoor use. Smoke can cause lifethreatening injuries.
- This grill must only be used outdoors on a level surface with proper ventilation. Place the grill at least 3 m from trees and combustible materials.
- Only use barbecue charcoal and briquettes when grilling.
The coal must always be placed on the charcoal holder. Otherwise, the grill can be damaged.
Don't overfill the charcoal holder.
- **Don't use more than 0.7 kg charcoal.**
If you use more than maximum 0.7 kg charcoal, the powder coated surface will be damaged by the heat.
- The grill must be cleaned thoroughly and regularly.
- Use appropriate barbecue tools with long heat resistant handles.
- Do not use sharp objects to clean the grill to avoid surface damage.
- Seal the lighter fluid after use and store it at a safe distance from the grill.
- The grill is not intended to be used in recreational vehicles or on boats.
- Do not use the grill in high winds.





Installation

Before you start using the Charcoal Grill

1. Make sure that the placement of the grill follows safety regulations.
2. Unpack the grill and place on prescribed location.
3. You are ready to grill. See "Igniting the grill".

Igniting the grill

1. Fill up the charcoal grate with maximum 0.7 kg briquettes or charcoal (image 1).
2. Different ways to light the charcoal:
 - a. Distribute two to three paraffin bags on the coal and then light the bags (image 2).
 - b. Light the coal using an electric lighter (image 3 and 4).
 - c. Pour on the appropriate amount of lighting fluid. Allow the lighter fluid to absorb completely before lighting (about 20 minutes).

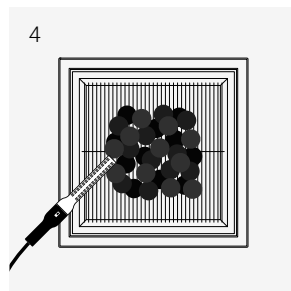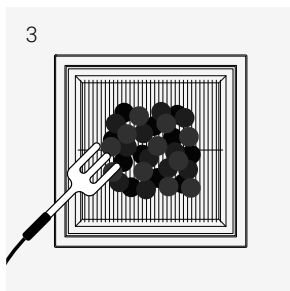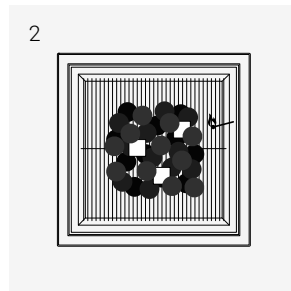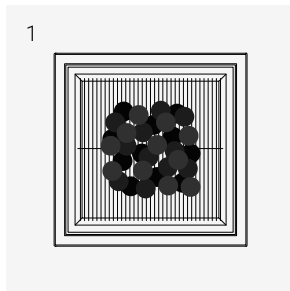

Maintenance

To avoid problems, be sure to inspect all the grill's parts after use. Wipe down with soapy water and a coarse cloth. Keep the grill clean for extended durability. After the final season's use: Empty the charcoal grate, brush off the grill but leave the last layer of grease from the previous cooking. It serves as a protective layer during the winter. Keep the grill in a warm and dry place, preferably covered with a Røshults Luxury Cover.

After usage, let the grill cool down completely. Clean the grill thoroughly with a cloth and soapy water. Do not use strong detergents, these can damage the paintwork and surface treatments. Cleaning the grill grate should be done with a dish-brush and light detergent.

Storage

Before storing the grill it must cool down completely. To protect it even more, use a Røshults Luxury Cover and/or store it indoors.

Emptying the ashes

After usage, let the grill cool down completely, then remove the charcoal grate and empty the ashes.

Warranty

Warranty

The warranty for this grill only includes defects in workmanship and missing parts, that will be replaced. Cost for delivery, assembly, replacing of worn parts (fire barrel, cooking grates) and other are not included in this warranty. The warranty is not valid in case of own modification or other alteration of the grill. Only valid with receipt.

In the event of misuse of the grill, the warranty does not apply.

