
## **Assembly Instructions**

KITCHEN ISLAND

EN

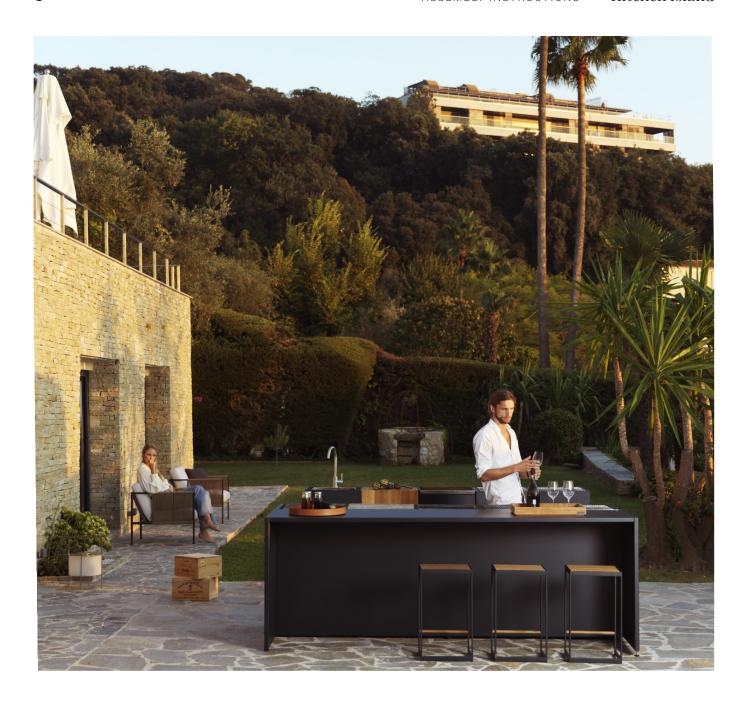

## Installation


- Before you install your Kitchen Island make sure the surface where you want to place it is clean and free from stones or other small objects.
- 2. Put the frame in the right position.
- 3. To find a horizontal adjustment, use the adjustable feet under the frame.
- 4. In each section there is a large storage compartment with a removable shelf. The doors can be assembled to be either left- or right hinged. They are assembled as specified in order when delivered. Behind each section there is a space adapted for gas hoses and outlets/water hose so you can easily place your modules on the cabinet top shelf. Each module have adjustable feet to fit into the frame.

5. To get the right finish after installation and to prevent water, other liquids, dirt, grease and similar to collect under the top shelf or in cabinets, let a specialist add silicone on the cabinet top shelves and against the side panels.

**IMPORTANT!** To ensure that your Kitchen Island ages with dignity it is imperative that you read and follow our Maintenance & Care instructions found with your delivery.


## **⚠** Warning!


Do not place flammable products or liquids in the cabinets under a gas or charcoal grill.

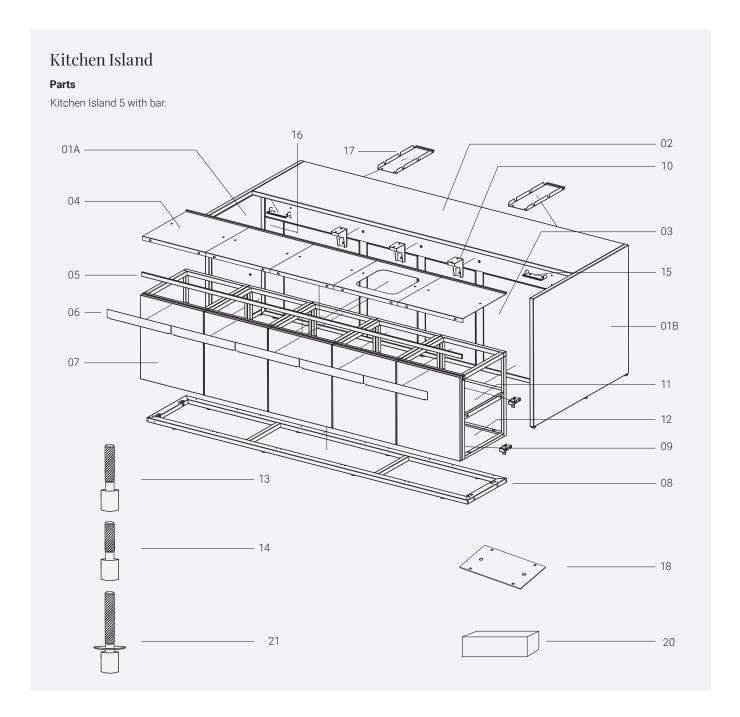


NO	DESCRIPTION
01A/B	Sidepanels, Left & Right
02	Top panel
03	Middle panel
04	Cabinet Top shelf (1 pc / cabinet)
05	Front rectangular tube
06	Front profile
07 A / B	Cabinets / doors
08	Base frame
09	Hinges
10	Support for bar panel
11	Shelf


12	Bottom shelf
13	Bolt M6 x 16
14	Bolt M6 x 10
15	Cover bar panel
16	Cover inside middle panel
17	Cover under bar panel
18	Bracket bar panel
19	Cover plate
20	Magnet (2 pcs / cabinet)
21	Bolt for fixing modules

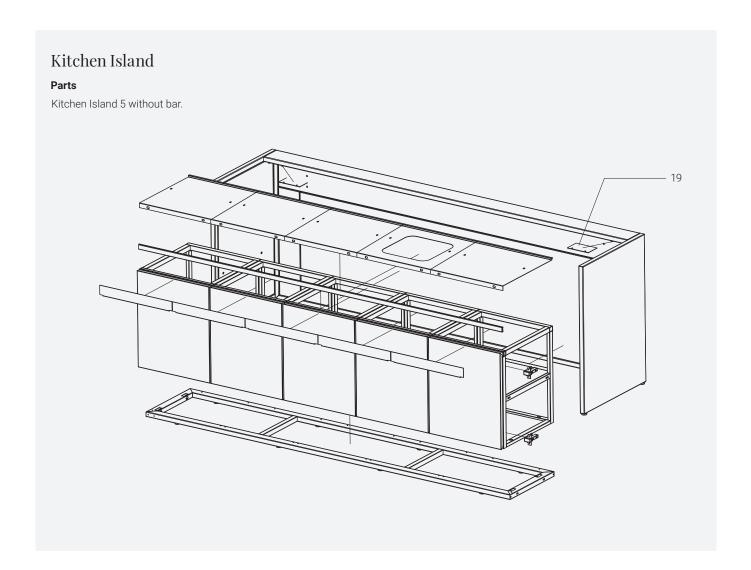

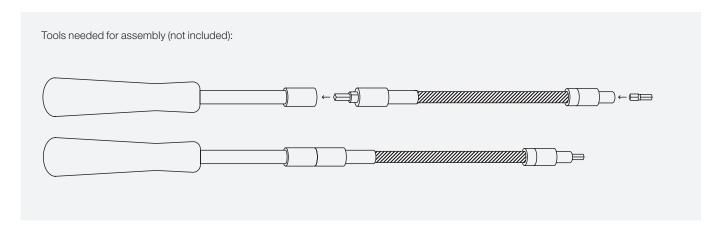


This assembly instruction is for the following part numbers: 200536, 200520, 200537, 200521, 200538, 200522, 200539, 200523, 200540, 200524, 200541, 200525, 200542, 200526, 200543, 200527

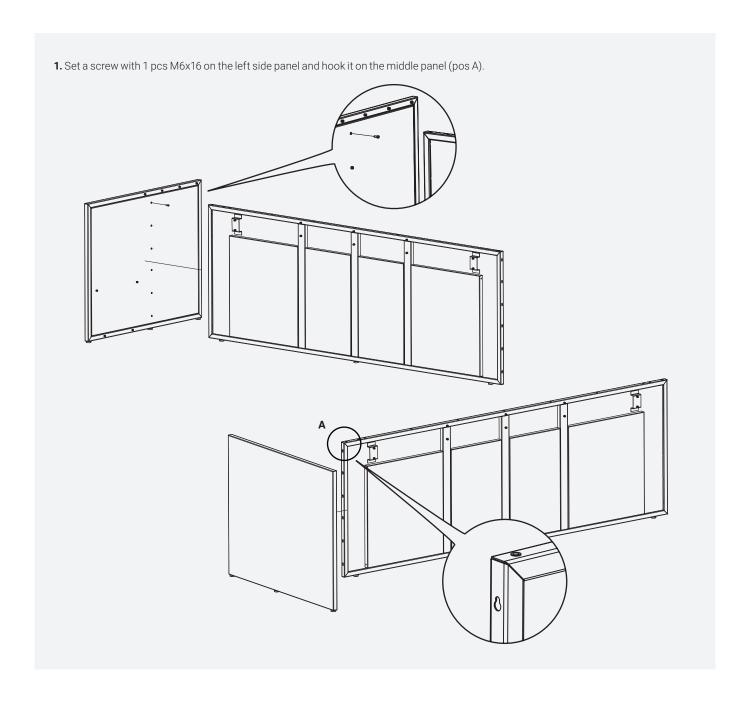


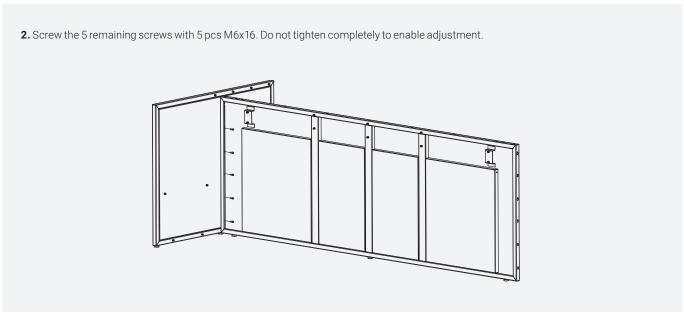

3. Tighten all 6 screws.


4. Set a screw with 1 pcs M6x16 on the right side panel and hook it on the middle panel (pos A).

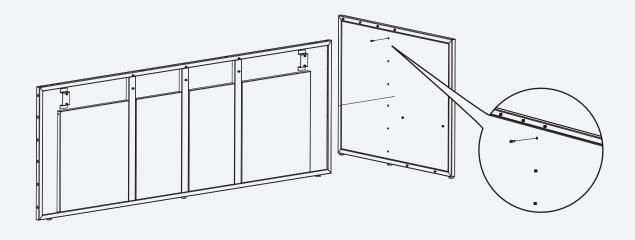

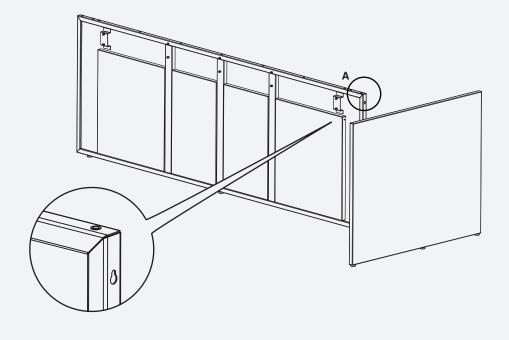






## 6. Tighten all 6 screws.

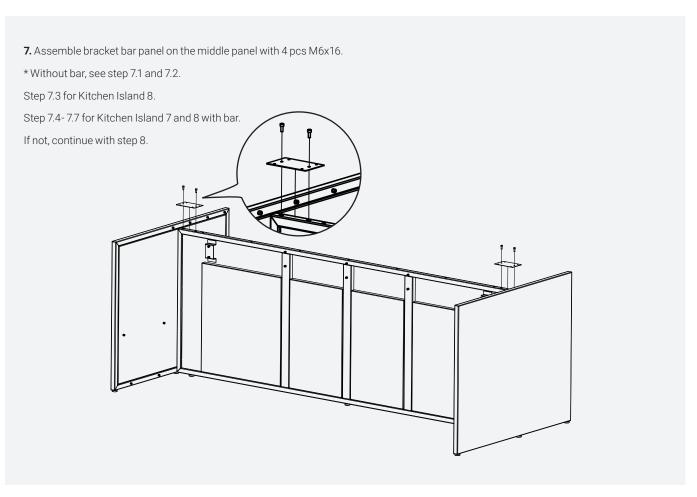



**Ö** ASSEMBLY INSTRUCTIONS Kitchen Island

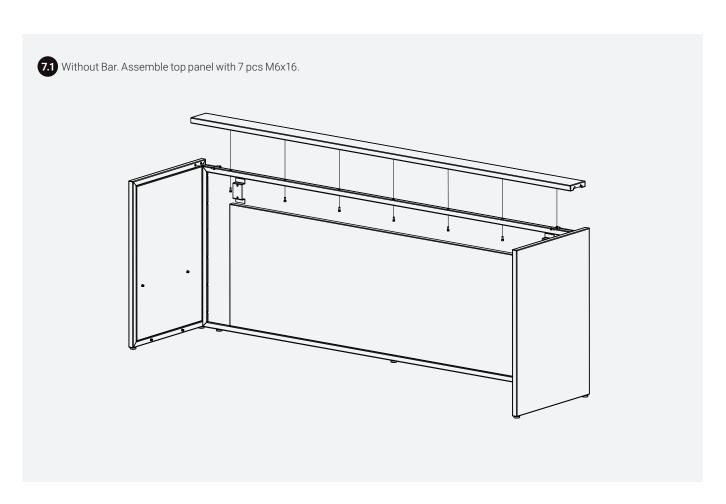


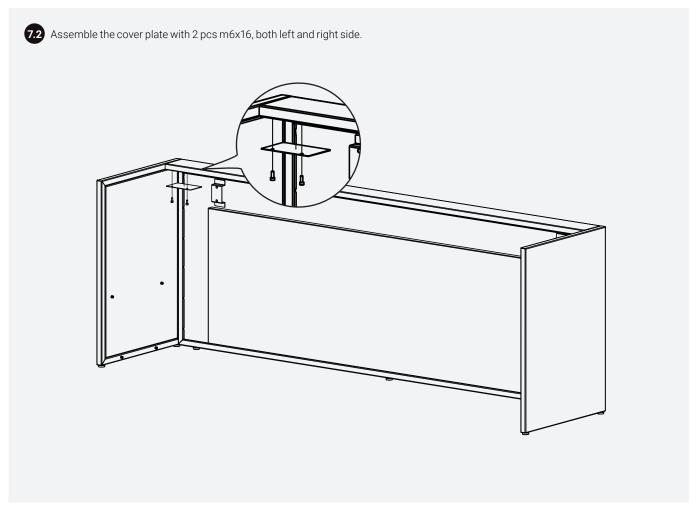


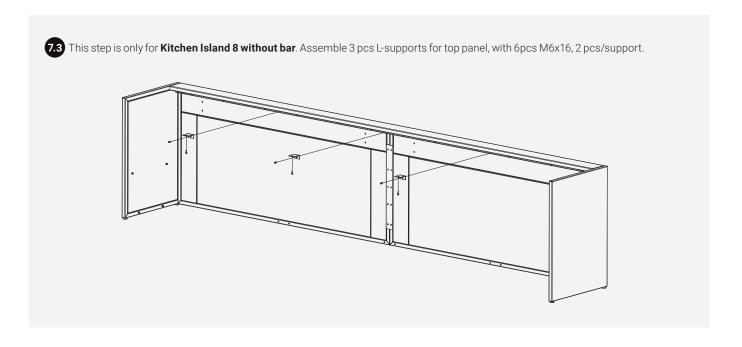

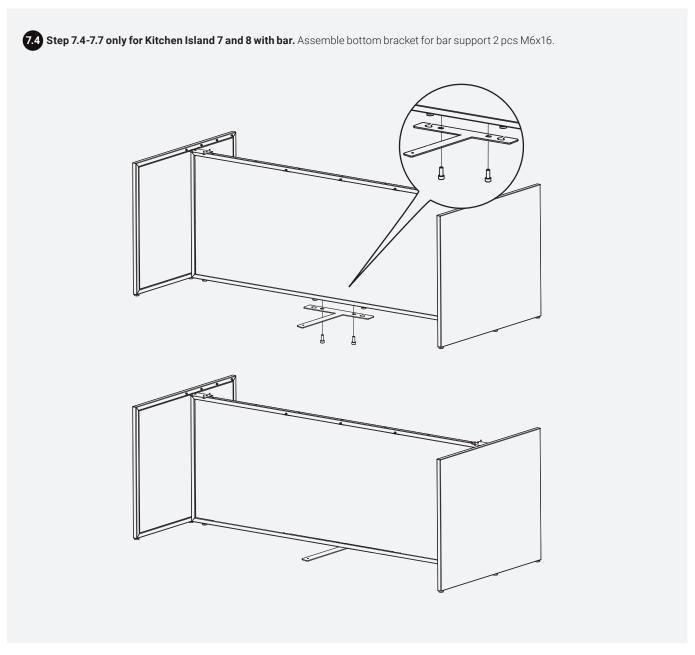


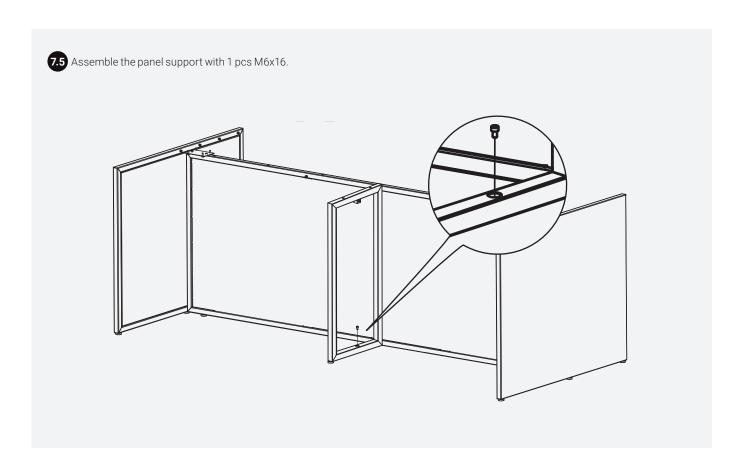

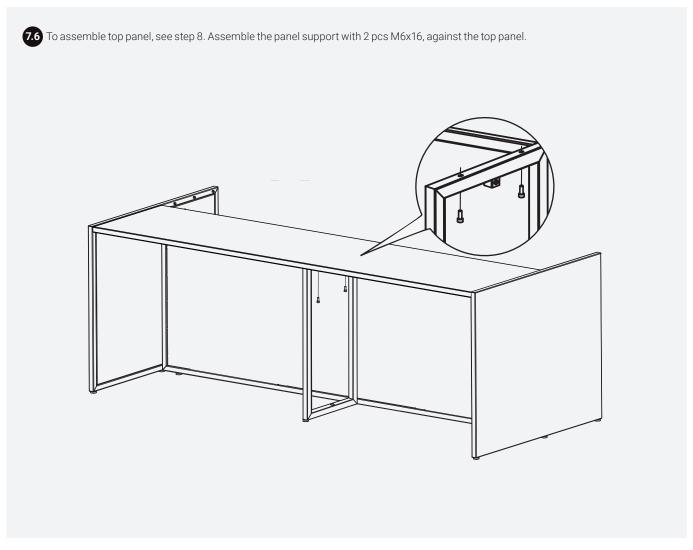


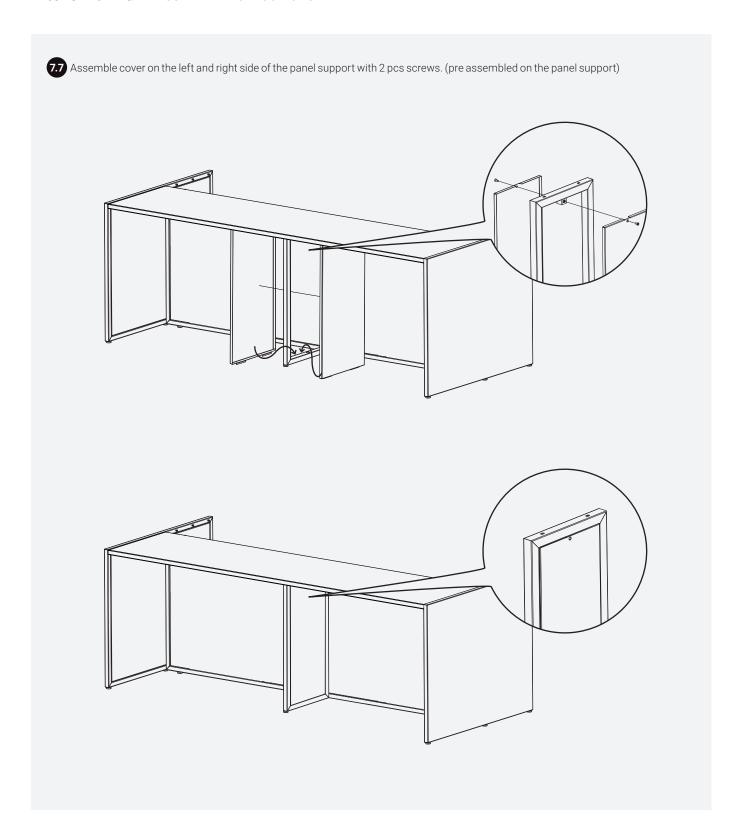


**8.** Assemble top panel with 14 pcs M6x16.

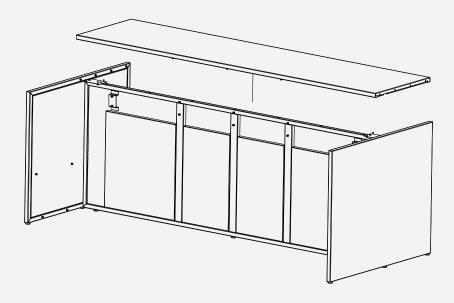



**8a.** First mount left and right side with 4 pcs on each side.

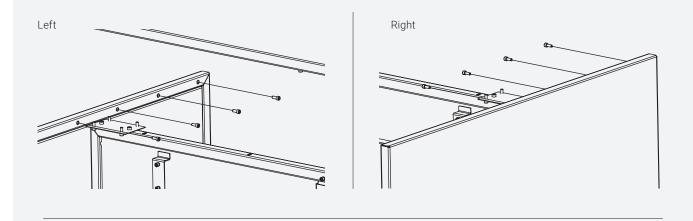



**8b.** Mount top panel to middle panel with 6 pcs.

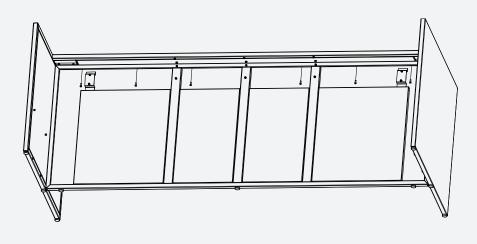


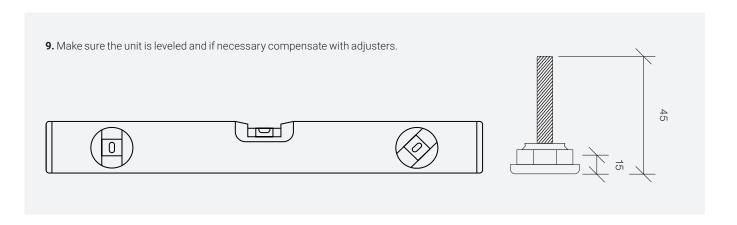


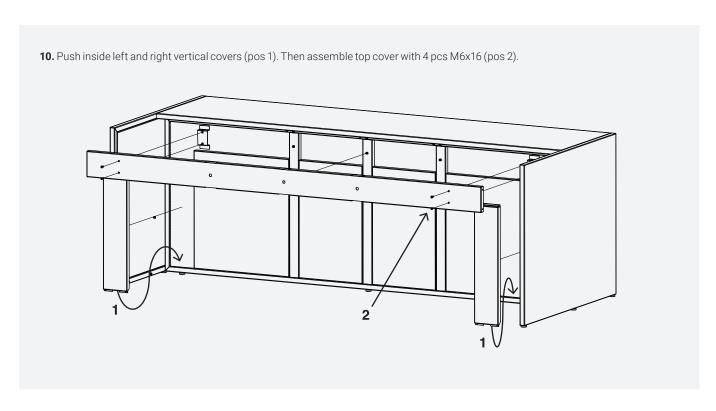


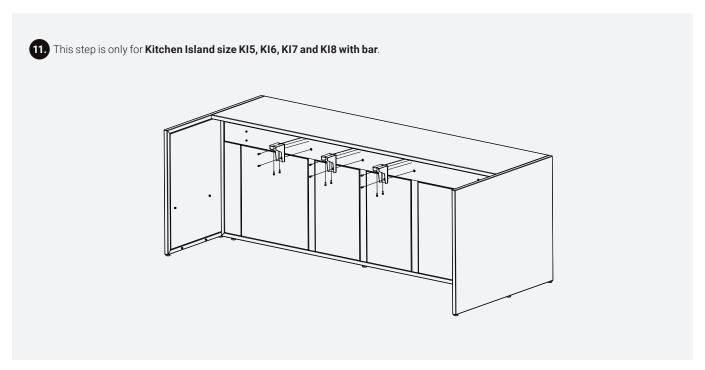


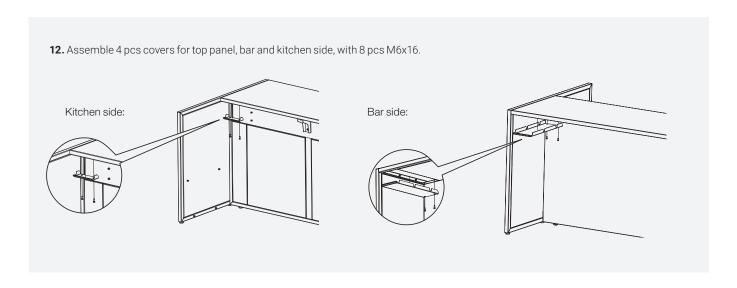


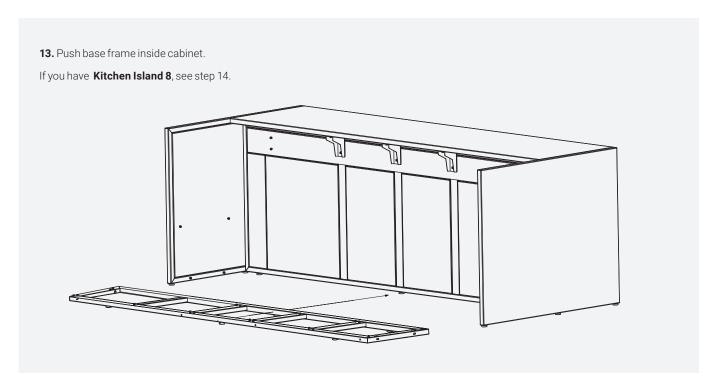


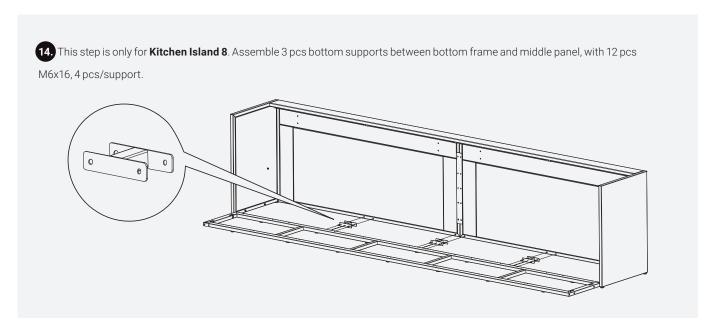


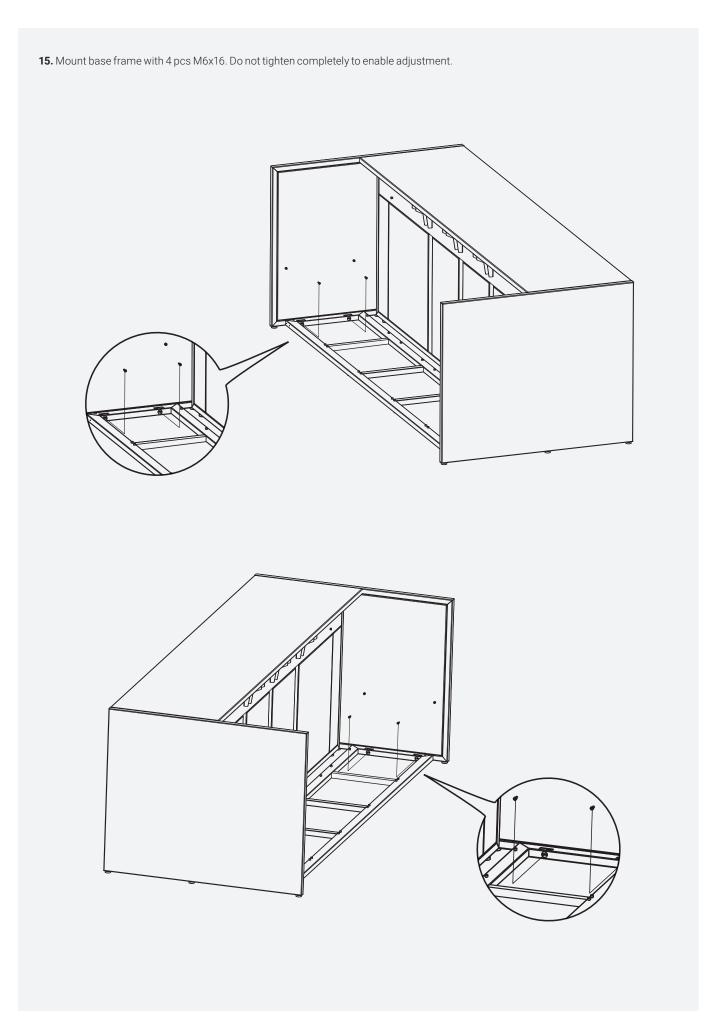


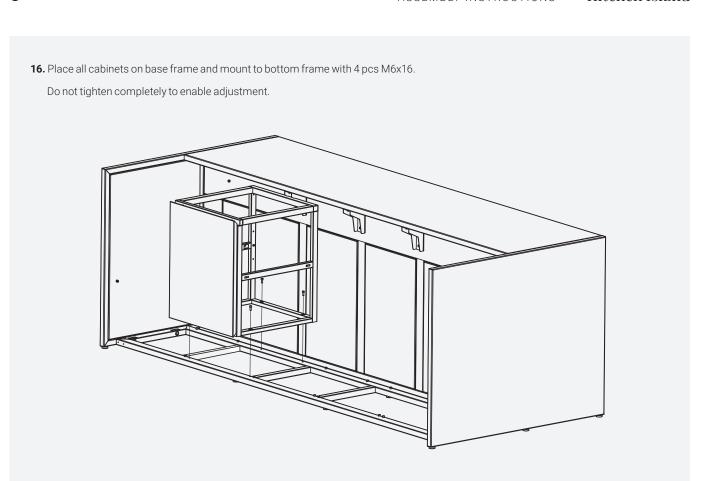

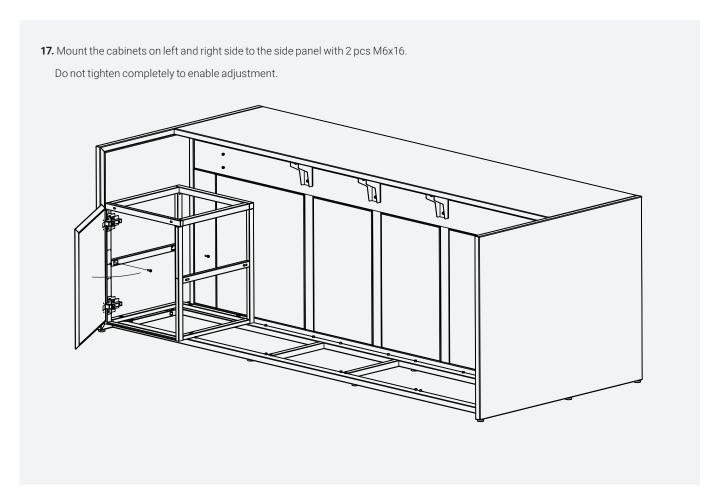

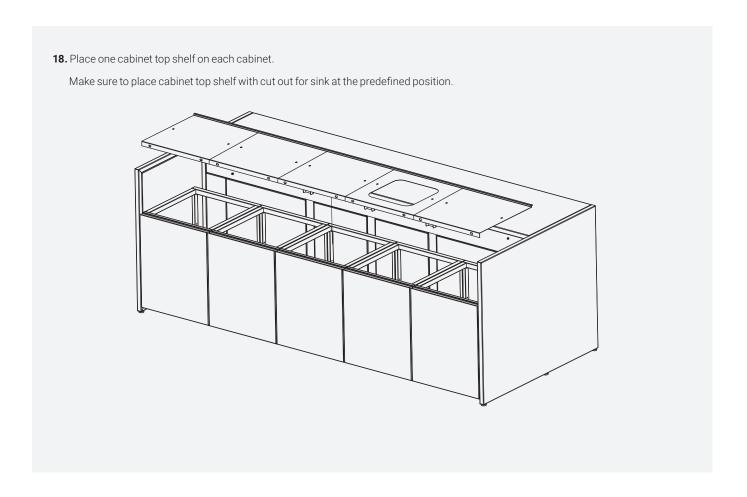

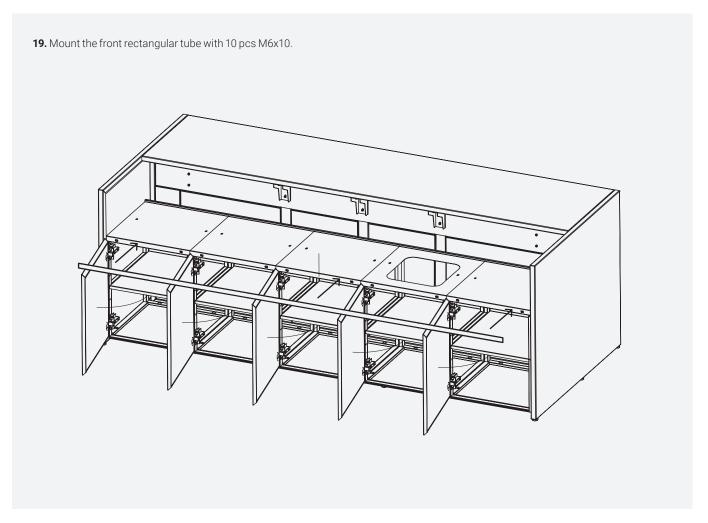

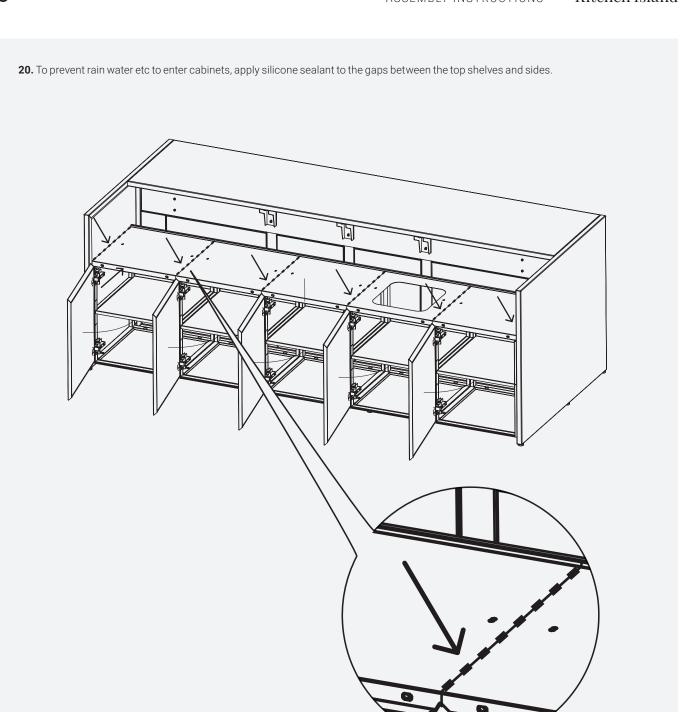



22. Tighten all screws (from step 15-19).

